J540 AIM104-RELAY8/IN8 2192-09780-000-000



AIM104-RELAY8/IN8

Assembly Kit

Each AIM104 module is supplied with a mounting kit to secure the module.

Handling

All AIM104's contain CMOS devices which could be damaged in the event of static electricity being discharged through them. At all times please observe anti-static precautions when handling the board and always unpack and install the board in an anti-static working area.

Software

A Utility Disk is supplied with your AIM104. It contains a host of software utilities designed specifically for each AIM104. Please refer to the *README.TXT* file on the disk for further information. It also includes a test program *EXAMP-01.EXE* which may be used to confirm access to the board. A summary of the software drivers can be found in the AIM104-Software Library.

Introduction

The AIM104-RELAY8/IN8 is an 8-bit PC/104 module providing 8 changeover relays, and 8 opto-isolated inputs. The module provides upto 1500V electrical isolation between your PC/104 based control system and the electrical system you are controlling. The isolation between adjacent channels is limited by the wiring and connectors to 100V. The power switching rating for the relay contacts is 60W (resistive load). The relays and board layout are designed to switch voltages up to 220V DC (125V AC) and currents up to 1.0A. However the Low Voltage Directive specifies that the product may only be safely used up to 48V DC.

The board includes jumper options for each digital input to select a 10ms input debounce filter.

Features

- 8 changeover relays with a power switching rating of 6oW (resistive load)
- Switching voltage upto 48v DC and switching currents up to 1.0A
- Output status readback register
- Relay drivers disabled on power up and reset
- Both normally closed and normally open relay terminals are available at the I/O connector
- 8 Opto-isolated inputs
- Opto-input switching voltage: 10v to 30v
- Maximum input frequency: Filter Disabled 10KHz

Filter enabled 50Hz

• Input Switching time (@ 24v) : Filter disabled : Switching ON : 5μs

Switching OFF: 50µs

Filter enabled: Switching ON: 10ms

Switching OFF: 5ms

- All inputs include reverse protection diodes
- Board access LED
- Operating temperature range, -20°C +70°C
- Power consumption +5V +/- 0.25V
 250mA typical
- MTBF: 91,195 hours (using generic figures from MIL-HDBK-217F at benign ground)




2192-09780-000-000 J540 AIM104-RELAY8/IN8


Operation

Each relay is switching by writing a '1' to the relay output register. On power up or reset the output latches that drive the relay drivers are disabled. To enable them it is necessary to write '01' to address base +1. For system initialisation, it is recommended that the output register is written with the required relay states before the relay enable bit is set.

The status of the opto inputs is read from I/O address base+1. When an input channel is switched on the value read by the host will be a 'o'.

Links

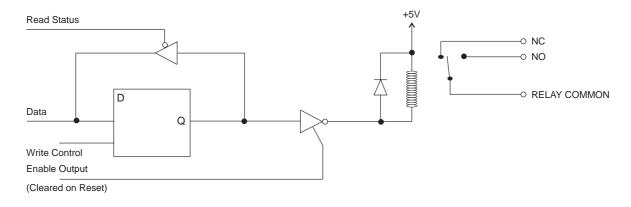

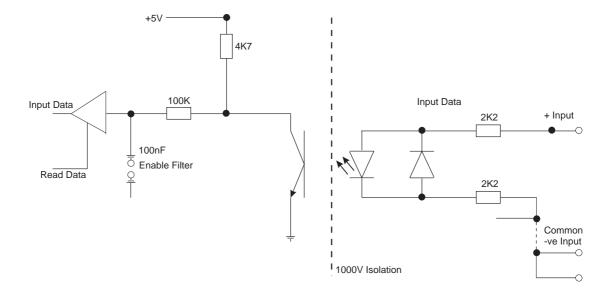



J540 AIM104-RELAY8/IN8 2192-09780-000-000

I/O Map

Address offset Register name		Read/Write	Comments	
00	Relay output	Write	Write to relays 0-7	
00	Relay status	Read	Readback from relay drivers	
01	Relay enable	Write	Enable relay driver latches	
01 Opto-inputs Read		Read Opto-inputs o-7		


	Bit Function
Relay outputs	Bit o-7 for relay o-7
	'o' = Relay NC contacts closed
	'1' = Relay NO contacts closed
Relay status	Bit o-7
	'o' = Relay NC position
	'1' = Relay NO position
Relay enable	Bit o
	'o' = All relays off (NC position)
	'1' = Relays controlled by relay output register
Opto inputs	Bit o-7
	'o' = Input ON
	'1' = Input OFF

Address Selection


LK1

The base address of the module is set using LK1; inserting a jumper selects 'o'.

Default Link Position [Address is 180h]

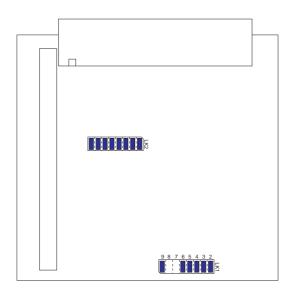

User Configuration Record

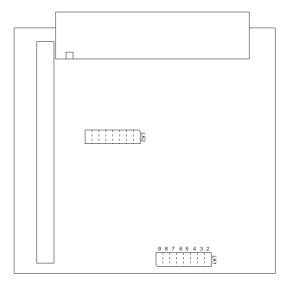



2192-09780-000-000 J540 AIM104-RELAY8/IN8

Input filter Selection

Each opto-isolated input channel can be set to include an input filter to reduce input reading errors caused by switch contact bounce.


Channel o: Link 2A Channel 7: Link 2H

Output Connector PL1 pin assignments

Pin No.	Function	Pin No.	Function
1	Common -ve input	2	Opto +ve input Bit o
3	Opto +ve input Bit 1	4	Opto +ve input Bit 2
5	Opto +ve input Bit 3	6	Opto +ve input Bit 4
7	Opto +ve input Bit 5	8	Opto +ve input Bit 6
9	Opto +ve input Bit 7	10	Common -ve input
11	Not connected	12	Relay o common
13	Relay o NO	14	Relay o NC
15	Not connected	16	Not connected
17	Relay 1 common	18	Relay 1 NO
19	Relay 1 NC	20	Not connected
21	Not connected	22	Relay 2 common
23	Relay 2 NO	24	Relay 2 NC
25	Not connected	26	Not connected
27	Relay 3 common	28	Relay 3 NO
29	Relay 3 NC	30	Not connected
31	Not connected	32	Relay 4 common
33	Relay 4 NO	34	Relay 4 NC
35	Not connected	36	Not connected
37	Relay 5 common	38	Relay 5 NO
39	Relay 5 NC	40	Not connected
41	Not connected	42	Relay 6 common
43	Relay 6 NO	44	Relay 6 NC
45	Not connected	46	Not connected
47	Relay 7 common	48	Relay 7 NO
49	Relay 7 NC	50	Not connected



J540 AIM104-RELAY8/IN8 2192-09780-000-000

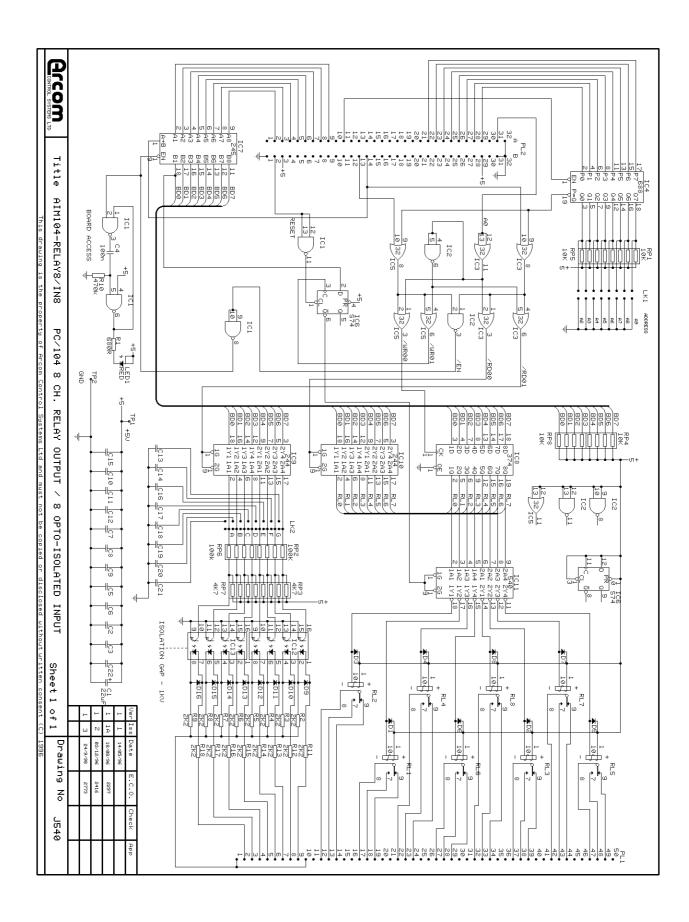



2192-09780-000-000 J540 AIM104-RELAY8/IN8

Revision History

Manual	PCB	Comments		
Issue A	V1 I1A	960920	First full release of manual. (Aim104 Module	
Issue B	V1 2	961223	Manual). Edits to J538, J541, J559 & Aim104 Software Library. (Aim104 Module Manual).	
Issue C	V1 I2	970604	[ECO 2494, 2502, 2516] (Aim Module Manual).	
Issue D	V1 l3	981116	[ECO 2679 & 2773] (Manual split up into Datasheets + PCB change to V1 I3 - Resistor Pack Mods).	
Issue E	V1 l3	990211	[ECO2800]	

NOTE: 960920- The Arcom Aim104 Modules were all put together in one manual (2192-08164-000-000), then updated to Issues B and C (2192-08240-000-000 & 2192-08521-000-000). During the lifetime of Issue C it was decided that the Aim Module Manual should be split into separate Datasheets [ECO 2679]. Hence, the Revision History for Issues A, B & C of the manual refer to the Aim Module Manual as was.

Product Information

Full information about other Arcom products is available via the **Fax-on-Demand System**, (Telephone Numbers are listed below), or by contacting our **WebSite** in the UK at: **www.arcom.co.uk** or in the US at: **www.arcomcontrols.com**

Useful Contact Information

Customer Support	Sales	or for the US: E-mail
Tel: +44 (0)1223 412 428	Tel: +44 (0)1223 411 200	icpsales@arcomcontrols.com
Fax: +44 (o)1223 403 409	Fax: +44 (o)1223 410 457	
E-mail: support@arcom.co.uk	E-mail sales@arcom.co.uk	

United Kingdom Arcom Control Systems Ltd Clifton Road Cambridge CB1 7EA, UK Tel: 01223 411 200 Fax: 01223 410 457 FoD: 01223 240 600	United States Arcom Control Systems Inc 13510 South Oak Street Kansas City MO 64145 USA Tel: 816 941 7025 Fax: 816 941 0343 FoD: 800 747 1097	Belgium Groen Nummer: Tel: 0800 7 3192 Fax: 0800 7 3191 France Numero Verto Tel: 0800 90 84 06 Fax: 0800 90 84 12 FoD: 0800 90 23 80	Germany Kostenlose Infoline: Tel: 0130 824 511 Fax: 0130 824 512 FoD: 0130 860 449 Netherlands Gratis 0800 Nummer: Tel: 0800 0221136 Fax: 0800 022114	Italy Numero Verde: Tel: 1677 90841 Fax: 1677 80841 FoD: 1678 73600
--	---	---	--	---

Whilst Arcom's sales team is always available to assist you in making your decision, the final choice of boards or systems is solely and wholly the responsibility of the buyer. Arcom's entire liability in respect of the boards or systems is as set out in Arcom's standard terms and conditions of sale.

If you intend to write your own low level software, you can start with the source code on the disk which is supplied. This is example code only to illustrate use on Arcom's products. It has not been commercially tested. No warranty is made in respect of this code and Arcom shall incur no liability whatsoever or howsoever arising from any use made of the code.

© 1999 Arcom Control Systems Ltd Arcom Control Systems is a subsidiary of Fairey Group Plc. All trademarks recognised.

Arcom Control Systems Ltd operate a company-wide quality management system which has been certified by the British Standards Institution (BSI) as compliant with ISO9001:1994

